



GALFER USA

310 Irving Drive
Oxnard Ca 93030

INSTALLATION PROCESS:
FK003D701 Complete Brake Line Kit
2008 Yamaha FJR1300 link w/ ABS

Torque specifications
Stainless steel 17-20 ft. lbs
Aluminum 12-15 ft. lbs

Step 1:

Identify the key components that complete our brake line kit:

You should have seven (7) hoses, one (1) double banjo bolt, eight (8) single banjo bolts, one (1) install CD. There are also a total of twenty-one (21) washers and four (4) "olive" conic inversors. Nineteen washers will be used, and four olives. The rest are spares.

Step 2:

Familiarize yourself with the brake lines, which are labeled for application. Lettered brake hoses (A, B, C, D and G) are installed on the front of the motorcycle, while brake hoses (E, F) are installed on the rear. Each label will reference a different drawing, which will show you the location of the key brake system components.

Step 3:

To ensure no paint damage from a brake fluid spill, completely cover the bike. This process can be messy, and brake fluid WILL drip!

Step 3:

Dry out (bleed) your OEM hoses, and take note of how the stock system is installed. You may want to take a couple pictures, in case you need to re-install.

Step 4:

Remove the stock hoses on the front of the motorcycle, and replace with Galfer hoses labeled A, B, C,D and G. Locate lines A and B. These will already be on a double banjo bolt with 3 washers in between; simply thread the double banjo bolt into the top (right) hole on the right caliper. Line A will run from the caliper to the middle female junction on the frame of the motorcycle. Line B will run from the right caliper - across the fender - to the left caliper.

Locate and install line C; this hose will run from the master cylinder to the top female junction on the frame of the motorcycle.

Locate and install line D; this line will travel from the bottom (left) hole on the right caliper, to the bottom (third) female junction on the frame of the motorcycle locate line G: this line goes from clutch master cylinder down to the clutch slave.

Torque all single and double banjo bolts at 17-20 ft. pounds, and make sure there is a washer between every banjo.

See pictures for right caliper sequences and positioning (lines A, B and D) for crossover (line B) female junction (lines A, C and D).

Step 5:

Remove the stock hoses on the rear of the motorcycle, and replace with Galfer hoses labeled E, F,.

Locate line F; this will run from a metal pipe at hydraulic unit (block) to the rear caliper. It may be easier to take the hard pipe off before installing line F. Install this hose female end first, leaving it snug but not completely tight. Route the line along the swing arm, through the guide to the left of the rear caliper. Install the rear caliper banjo bolt, then tighten male in to female fitting.

Locate line E; this will run from the hydraulic unit to the rear master cylinder. Install 40-degree banjo fitting to master cylinder first, then route the line up to the hydraulic unit.



GALFER USA

310 Irving Drive
Oxnard Ca 93030

Torque all single banjo bolts to 17-20 ft. pounds, and make sure there is a washer between every banjo.

See pictures for rear hose (line F-E):

Before you proceed to the next step, please check for clearance of the lines. Compress the suspension to make sure that the lines are not binding with anything. When the front and rear end are fully extended or fully compressed, double check that the lines are traveling correctly and clear from any obstructions.

Step 6:

Bleed brake system according to owner's manual, and build appropriate pressure. Finish with Galfer DOT-4 brake fluid.

Step 7:

Once the bleeding has been done, please check brake fluid level on master cylinder. Close brake fluid reservoir, and zip-tie the brake lever to the throttle for at least 2 hours to ensure no leaks or other possible issues. For the rear, set a jug or something similar on the brake pedal to apply pressure. If the lines are not leaking and all looks OK (bolts are tight, washers in between), you may now ride with the new system. Make sure the rider is aware that the overall braking feel has dramatically changed. We suggest taking it easy to get used to the new brake lever feel and pressure. We recommend checking your brake system periodically; keep in mind brake lines must be checked **very** carefully! If there are any signs of damage or stress to the lines, the complete brake system must be replaced. Remember, our brake lines have a LIFETIME WARRANTY! If you have any problems or questions, don't hesitate to call us at **(800) 685-6633**.

NOTES:

- When referring to right and left, it will be as if you were sitting on the motorcycle. For example, the right caliper is on your right when you are sitting on the motorcycle (left if you are looking at it head on).
- All female ends require a brass conic inverter, more commonly referred to as an "olive".



GALFER USA DIVISION

310 Irving Drive, Oxnard, CA 93030

(800) 685-6633 (805) 988-2900



FAX (805) 988-2948

WWW.GALFERUSA.COM



GALFER USA

310 Irving Drive
Oxnard Ca 93030

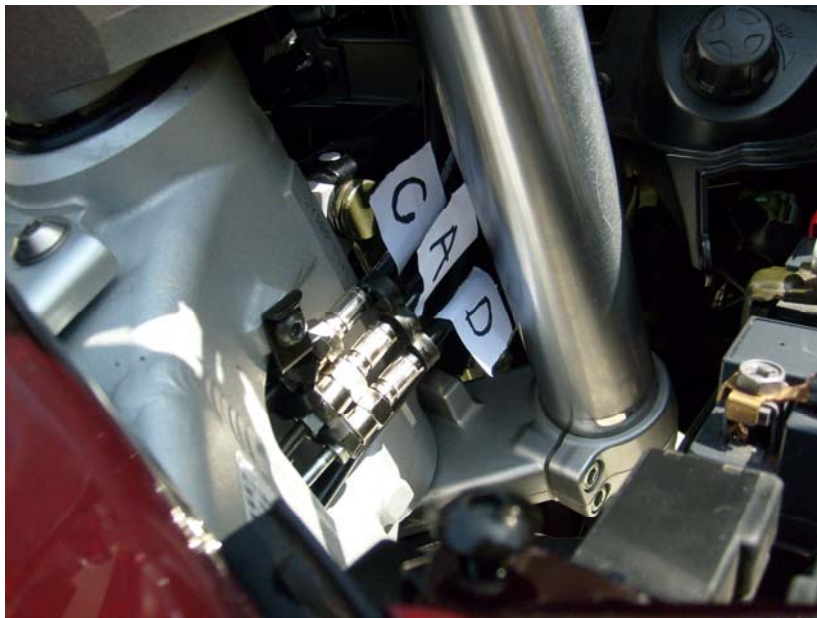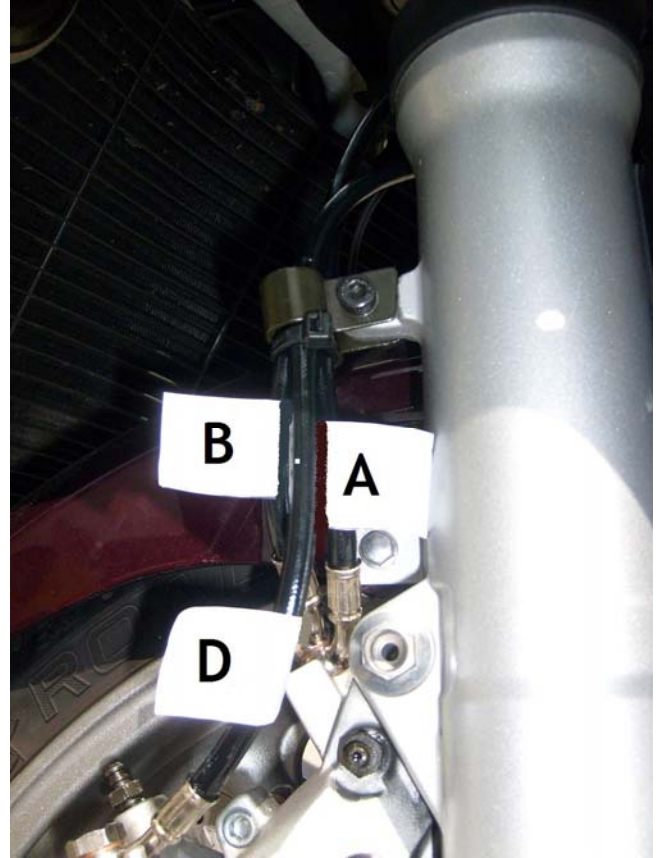



GALFER USA

310 Irving Drive
Oxnard Ca 93030

