

INSTALLATION PROCESS:

FK003D424SB Superbike Front Brake Line Kit

2004-07 HONDA CBR 1000RR

RACE USE ONLY



Step 1:

Identify the key components that complete our brake line kit:

You should have two (2) lines, one (1) double banjo bolt, two (2) male adapters, and three (3) c-clips. We have also included a total of seven (7) washers; five (5) will be used, and two (2) will be spares. We strongly suggest having a professional mechanic install your brake lines, all other installs will **VOID** your warranty. ***Be sure to inspect your brake lines before and after every race.***

Step 2:

To ensure there is no paint damage from the brake fluid, completely cover the front end of the bike. Installing brake lines can be a messy process, and brake fluid **WILL** spill!

Step 3:

After bleeding and drying out the OEM brake system, uninstall your front stock hoses and remove the line holder at the fender. Take note of how the stock system was routed in case you need to re-install the hoses.

Step 4:

Install the Galfer male adapters onto each caliper. Thread each adapter into the calipers using one (1) washer and torque at 12 - 13 ft pounds.

Step 5:

Familiarize yourself with the new Galfer brake lines; notice they are labeled right and left (this is as if you are sitting on the bike,) the labels also indicate which fittings to install at the master cylinder. Install these ends to the master cylinder using the double banjo bolt and three (3) washers, the sequence will be as follows; master cylinder, washer, left line banjo fitting, washer, right line banjo fitting, washer, double banjo bolt. Torque level is from 12 – 17 ft pounds. ***Please refer to pictures A, B, C and D; for proper position and routing of the Galfer lines at your master cylinder.***

Step 6:

Route the lines down to the lower triple tree, be sure to keep the left line on *your right* and towards the left caliper (**be sure to refer to pictures A, B, C and D.**) Use the larger Galfer provided c-clip and stock bolt to replace the OEM line holder at the lower triple tree (**refer to picture D.**) Continue to route the lines behind the forks and to their appropriate calipers (**refer to picture E.**) Use the smaller Galfer provided c-clips and stock hardware to replace the line holder and splitter at your fender (**refer to pictures F and G.**)

Step 7:

Install each line to the male adapters already installed at the calipers, be sure to position the fittings straight up and torque to 6 ½ ft pounds (**refer to picture H.**)

Step 8:

Before you begin the next step, please check the clearance of your new lines. When the front end is fully extended or compressed, make sure the lines do not bind with anything. Be sure to triple check that the lines are traveling correctly and are clear from any obstructions.

Step 9:

Bleed your brake system according to the owner's manual. Add Galfer DOT-4 brake fluid to the system and build appropriate pressure.

Step 10:

Once you have bled the system, please check the brake fluid level in your master cylinder. Top off your brake fluid according to your manual and close the brake fluid reservoir. To ensure there are no leaks or other issues, zip-tie the brake lever to the throttle for at least 2 hours. If the lines are not leaking and all else looks good, (bolts are tight and torqued down to specification, washers are in place, and lines are clear from obstruction) you are now ready to ride with the new brake system.

Please be aware that the overall braking feel has been changed dramatically. We suggest taking it easy while you get used to the new brake lever pressure and feel. We recommend checking your brake system periodically *as well as before and after every race*; be sure to check that your bolts are tight and **VERY** carefully check your lines for any leaks or damage. If there are any signs of damage or stress to the lines, the complete brake line kit will need to be replaced. Remember, our brake lines have a **LIFETIME WARRANTY!** If you have any problems or questions, do not hesitate to call our tech department - **(800) 685-6633**.




a. Front master cylinder



b. Routing from master cylinder to lower triple tree



c. Routing at lower triple tree

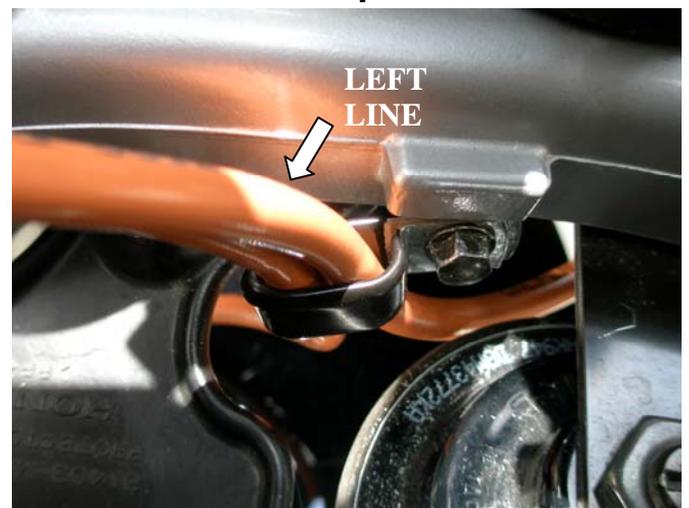


d. Galfer provided c-clip at lower triple tree

GALFER USA
310 IRVING DRIVE OXNARD, CA 93030 . PH (805) 988-2900 . FAX (800) 685-6633
WWW.GALFERUSA.COM





e. Routing behind forks

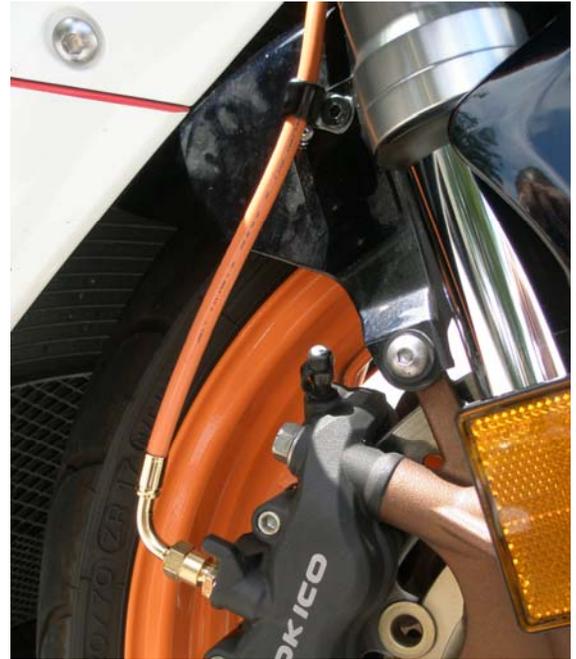

f. Right caliper, notice Galfer provided c-clip at fender



g. Right caliper, notice Galfer provided c-clip at fender



h. Left caliper, notice position of fitting

GALFER USA
310 IRVING DRIVE
OXNARD, CA 93030
PH (805) 988-2900 . FAX (800) 685-6633
WWW.GALFERUSA.COM

