

INSTALLATION PROCESS:
FK002D656GP Front GP Brake Line Kit
2008-10 Suzuki GSX-R 600 / 750

Torque specifications
Stainless steel 15-17 ft. lbs
Aluminum 12-15 ft. lbs



Step 1:

Identify the key components that complete our brake line kit:

You should have a 3-line kit, three (3) single banjo bolts, and one (1) c-clip. We have also included a total of eight (8) washers; six (6) will be used, and two (2) will be spares. We strongly suggest having a professional mechanic install your brake lines, all other installs may void your warranty.

Step 2:

To ensure there is no paint damage from the brake fluid, completely cover the front end of the bike. Installing brake lines can be a messy process, and brake fluid *WILL* spill!

Step 3:

After bleeding and drying out the OEM brake system, uninstall your front stock hoses and remove the line holders from the fender. Take note of how the stock system was routed in case you need to re-install the hoses.

Step 4:

Identify the top line, this line is to be installed at the master cylinder using a single banjo bolt and two (2) washers, the sequence will be as follows; master cylinder, washer, banjo fitting, washer, single banjo bolt (**refer to picture A.**) Be sure to note what type of fittings you have received, since torque specs will vary.

Step 5:

Route the lines down to the lower triple tree. Use the Galfer provided c-clip to route the left line towards the left caliper, (left, as if you are sitting on the bike) this will replace the OEM clip at the triple tree (**refer to picture B.**) The lower lines will travel in front of the forks and to the calipers (**refer to picture C.**) Install the lines to their appropriate calipers using a single banjo bolt and two (2) washers for each line, following the same sequence as the master cylinder (**refer to pictures D, E & F.**)

Step 6:

Before you begin the next step, please check the clearance of your new lines. When the front end is fully extended or compressed, make sure the lines do not bind with anything. Be sure to triple check that the lines are traveling correctly and are clear from any obstructions.

Step 7:

Bleed your brake system according to the owner's manual. Add Galfer DOT-4 brake fluid to the system and build appropriate pressure.

Step 8:

Once you have bled the system, please check the brake fluid level in your master cylinder. Top off your brake fluid according to your manual and close the brake fluid reservoir. To ensure there are no leaks or other issues, zip-tie the brake lever to the throttle for at least 2 hours. If the lines are not leaking and all else looks good, (bolts are tight and torqued down to specification, washers are in place, and lines are clear from obstruction) you are now ready to ride with the new brake system.


Please be aware that the overall braking feel has been changed dramatically. We suggest taking it easy while you get used to the new brake lever pressure and feel. We recommend checking your brake system periodically as well as before and after every race; be sure to check that your bolts are tight and *VERY* carefully check your lines for any leaks or damage. If there are any signs of damage or stress to the lines, the complete brake line kit will need to be replaced. Remember, our brake lines have a **LIFETIME WARRANTY!** If you have any problems or questions, do not hesitate to call our tech department - **(800) 685-6633.**



a. Front master cylinder



b. Galfer c-clip at lower triple tree

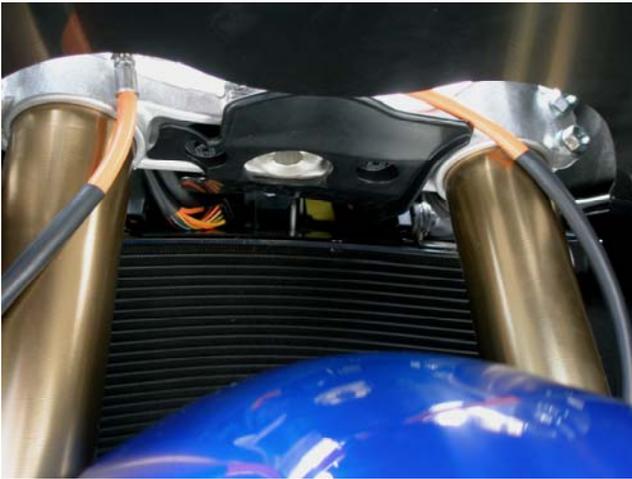

c. Routing in front of forks



d. Left caliper, notice sequence



e. Left caliper



f. Right caliper

GALFER USA
310 IRVING DRIVE OXNARD, CA 93030 . PH (805) 988-2900 . FAX (800) 685-6633
WWW.GALFERUSA.COM

